


Contents

Chapter	Page
1 General	
Exploded view	1.1/1
2 Removal and installation of instrument panel	2.1/1
Removal and installation of cover under instrument panel	2.2/1
3 Center console	
Removal and installation of center console	3.1/1
Removal and installation of side lining on center console	3.2/1
4 Removal and installation of tray over transmission tunnel	4.1/1
5 Removal and installation of headliner	5.1/1
6 Removal and installation of lining on B-pillar	6.1/1
7 Removal and installation of side wall lining	7.1/1
Removal and installation of side wall lining Wheelbase 2400 mm	7.2/1
8 Removal and installation of interior rear-view mirror	8.1/1
9 Removal and installation of sun visor	9.1/1


Exploded view

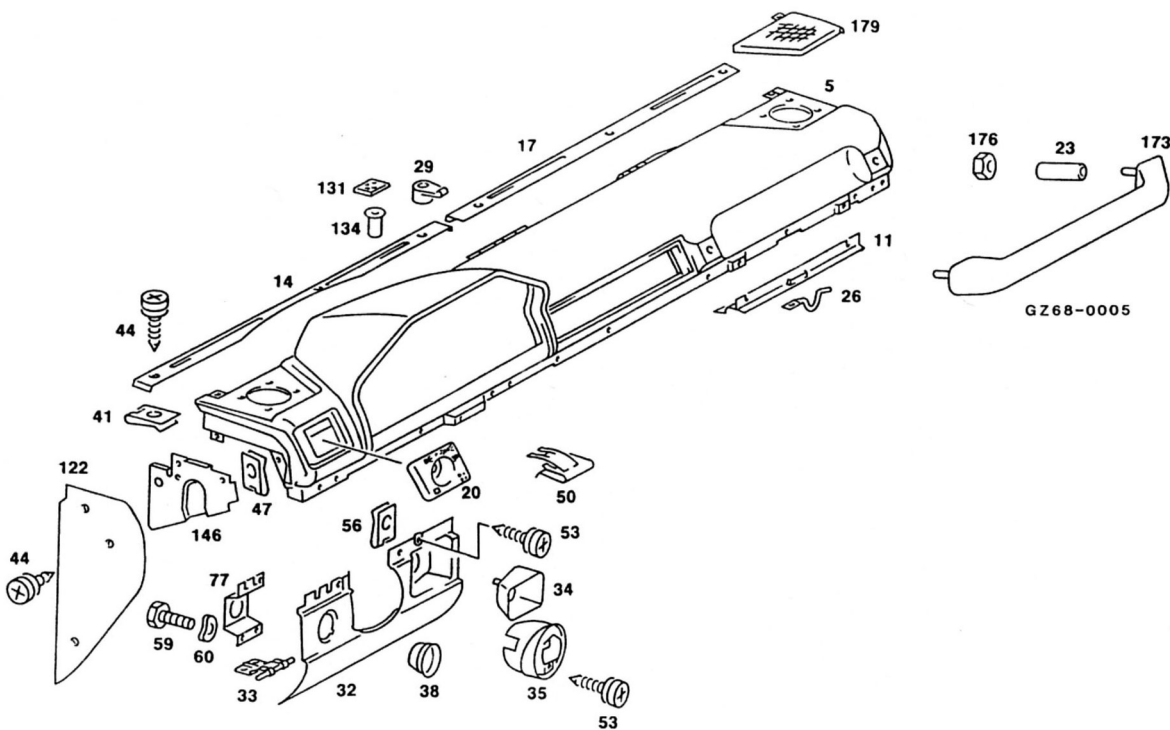

Instrument panel

- | | | | |
|----|--------------------------|-----|-----------------------------------|
| 5 | Instrument panel | 34 | Trim ring/panel of ignition lock |
| 11 | Cover | 35 | Covering of steering column tube |
| 14 | Cover | 38 | Cover of headlamp range adjuster |
| 17 | Cover | 77 | Mount for headlamp range adjuster |
| 20 | Cover of light switch | 122 | Side cover |
| 23 | Spacer tube | 146 | Bracket |
| 32 | Cover of steering column | 173 | Handle |
| 33 | Hinge | 179 | Cover of left speaker |


Exploded view

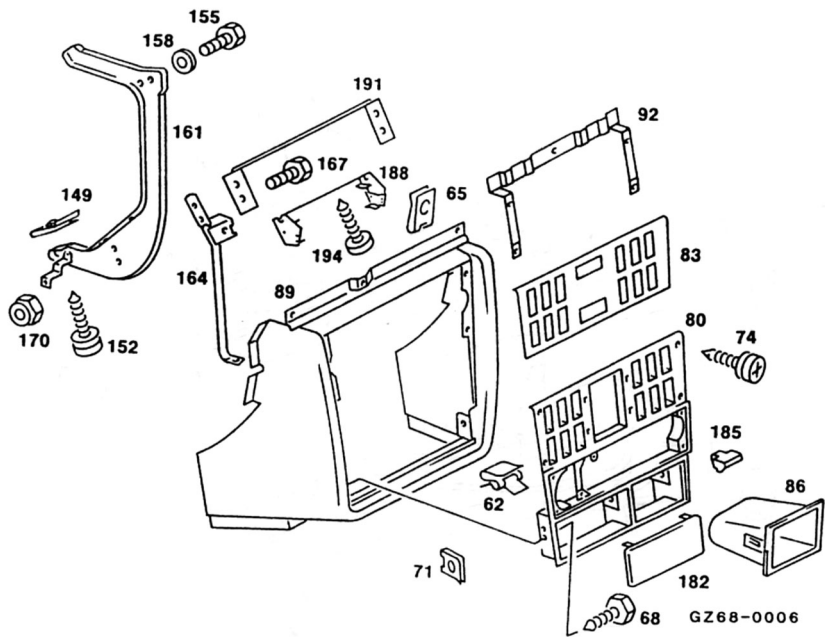

Center console

- | | |
|------------------|------------------|
| 80 Console | 164 Support |
| 86 Tray | 182 Cover |
| 89 Console | 185 Stop |
| 92 Reinforcement | 188 Radio holder |
| 161 Holder | 191 Radio holder |


Exploded view

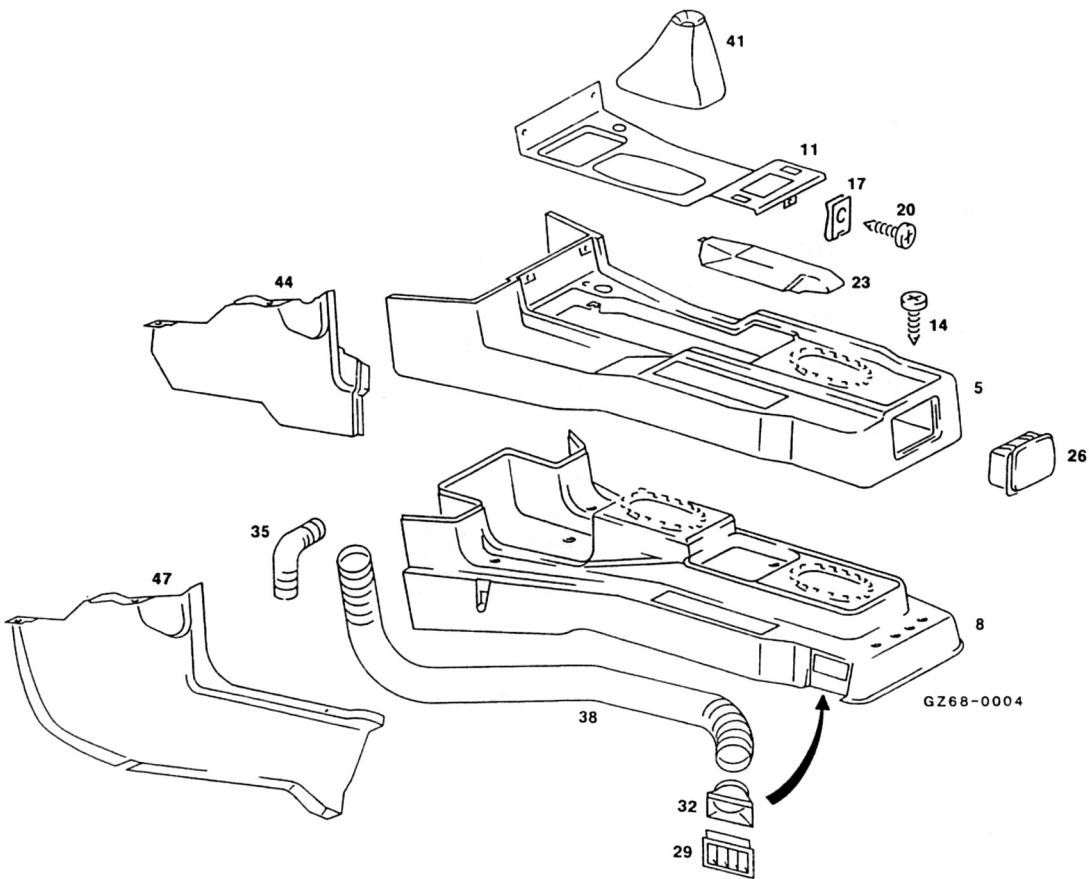

Cover over transmission tunnel

- 5 Housing
- 8 Tray
- 11 Cover
- 23 Cover of parking brake lever
- 26 Rear ashtray

Exploded view

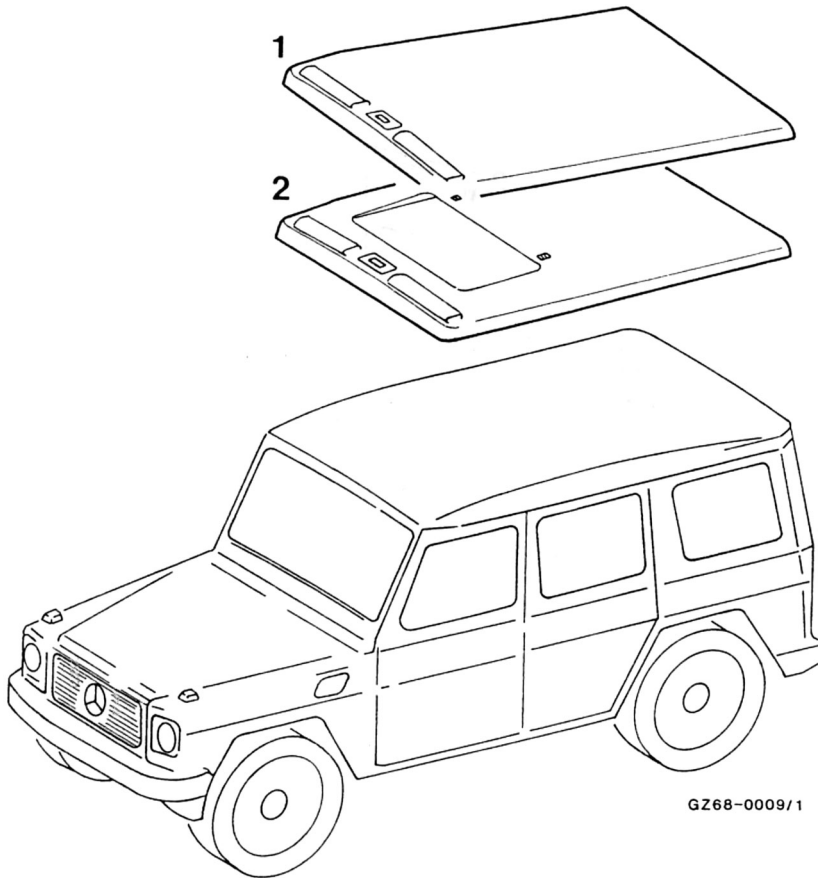


GZ68-0009/1

Headliner

- 1 Interior lining (headliner)
- 2 Interior lining (headliner) with tilting/sliding roof cutout section

Exploded view

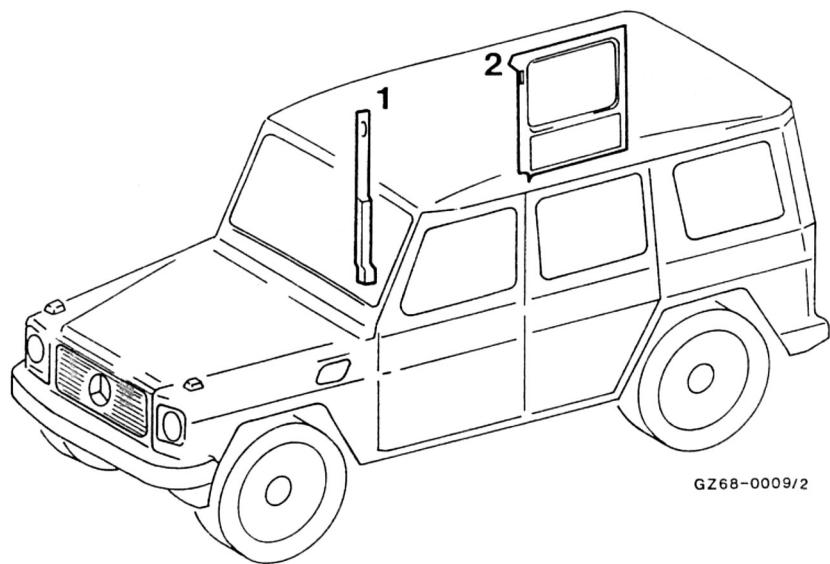

GZ68-0009/2


Linings

- 1 Lining on B pillar
- 2 Side wall lining

Removal and installation

1 Remove cover strip and remove speaker covers.


Note: As from 03/94 the cover strip is plugged in.

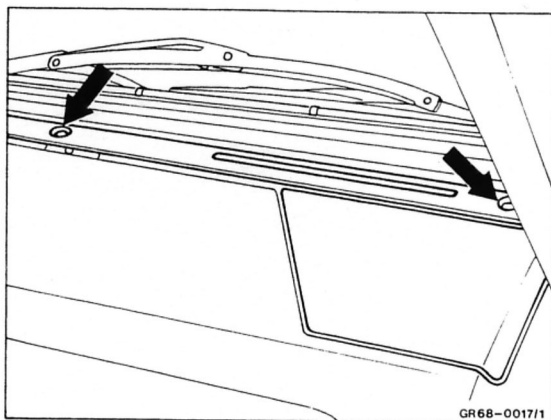

2 Detach steering wheel.


Note: From 03/94 an airbag is installed, refer to 91.60 – 1.1/1.

3 Remove jacket tube casing (1).

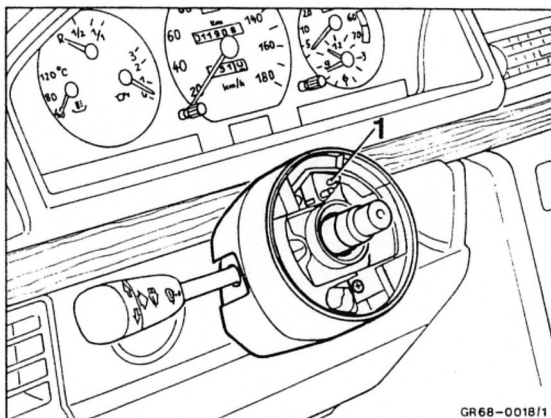


4 Remove wooden strips (1 and 2).


Note: Remove plastic caps from side nozzles.

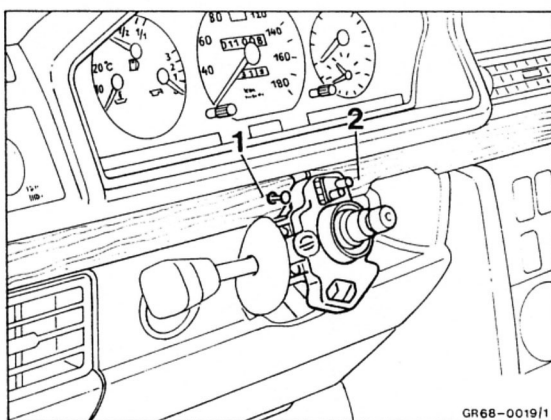

5 Remove instrument cluster, refer to 82.51 – 7.1/1.

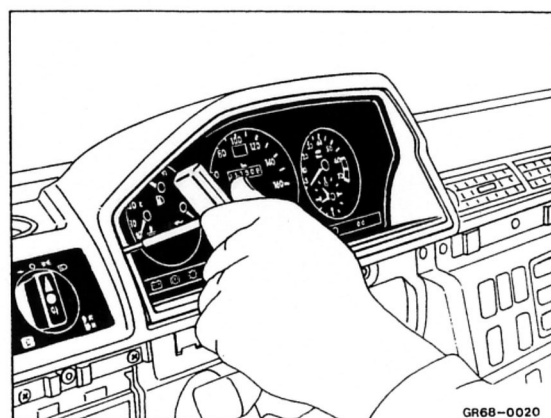


- 6 Remove center nozzle.

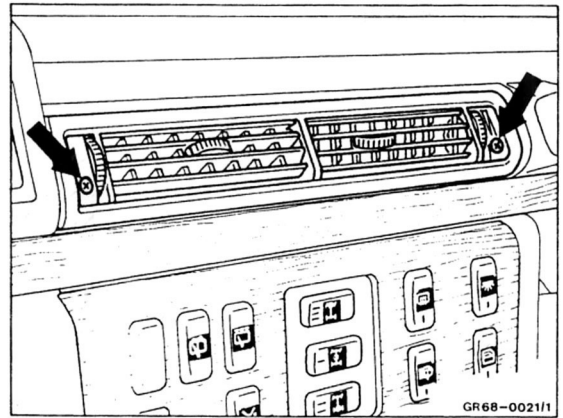


- 7 Remove glove compartment.

- 8 Remove side nozzles left and right.

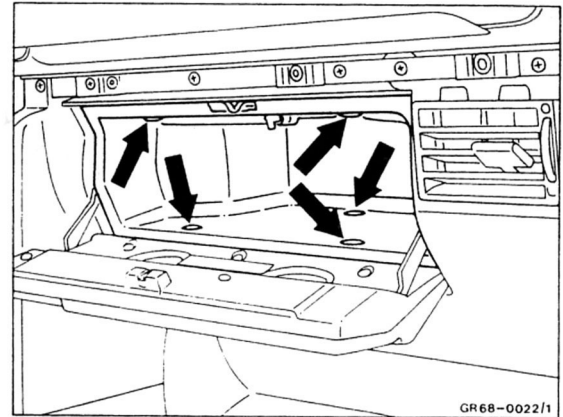


- 9 Remove side parts


Note: For this purpose release bolt on the inside.

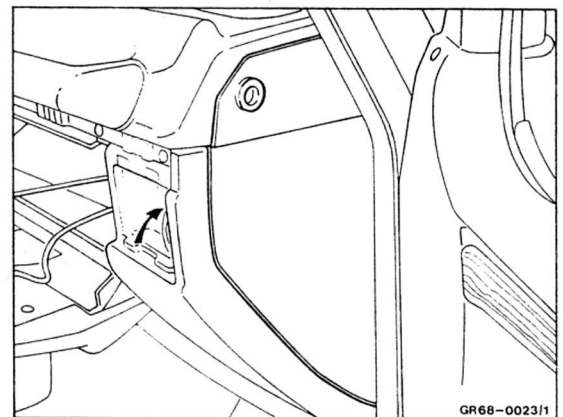


- 10 Remove loudspeaker.

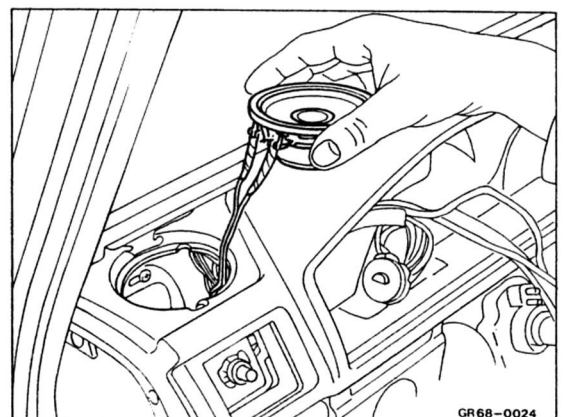

11 Remove rotary light switch.

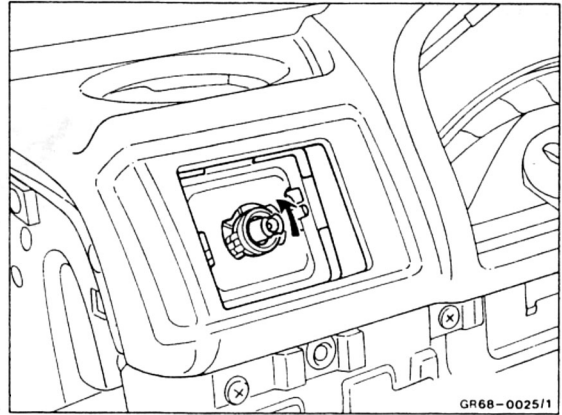


12 Remove hand rail.

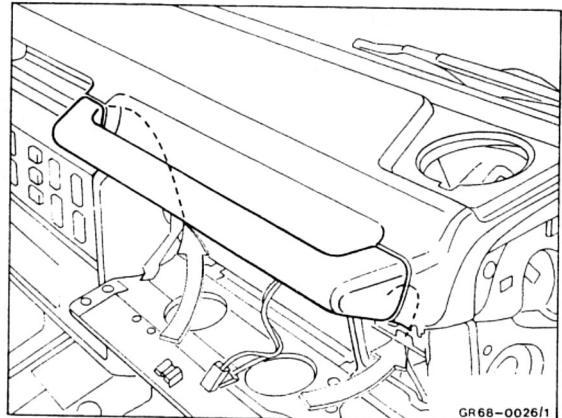


13 Release all bolts on the instrument panel and remove.

14 Install in reverse sequence.

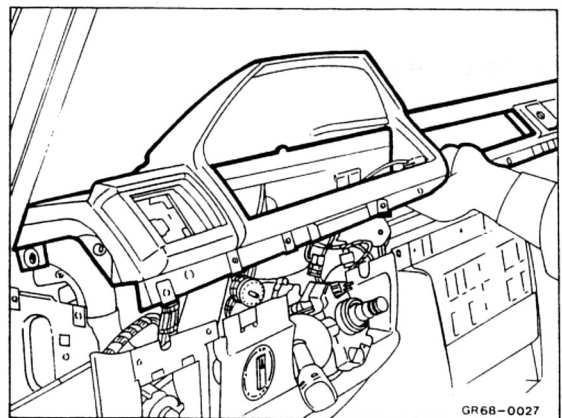


Removal and installation

- 1 Remove center console, refer to 3.1/1.
- 2 Remove tray over transmission tunnel, refer to 4.1/1.

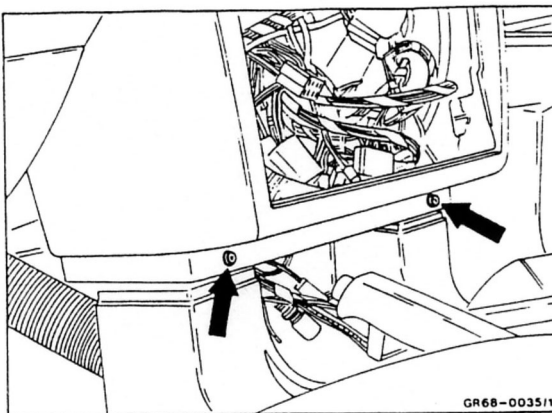


- 3 Release bottom section of the instrument panel on the left and right and detach.

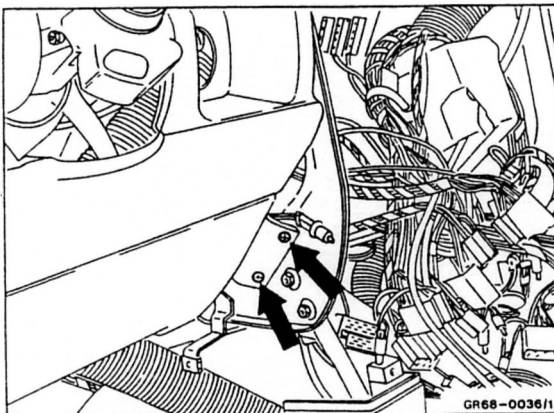

- 4 Unclip headlamp range control and put to the side.

Note: Make sure that the lines are not kinked. Under no circumstances open the system.

- 5 Install in reverse sequence.

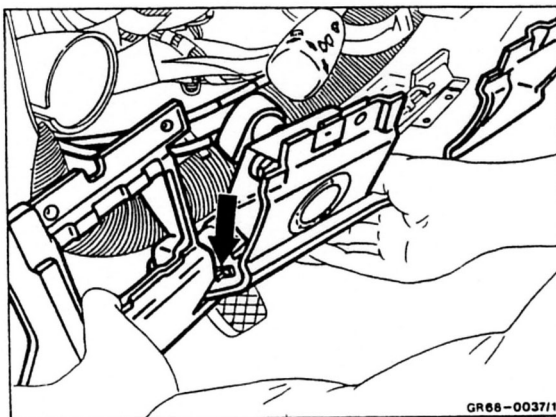


Removal and installation

- 1 Detach steering wheel.


Note: From 03/94 an airbag is installed, refer to 91.60 – 1.1/1.

- 2 Remove steering column tube covering.
- 3 Remove wooden strips (1 and 2).

Note: Remove plastic caps from side nozzles.

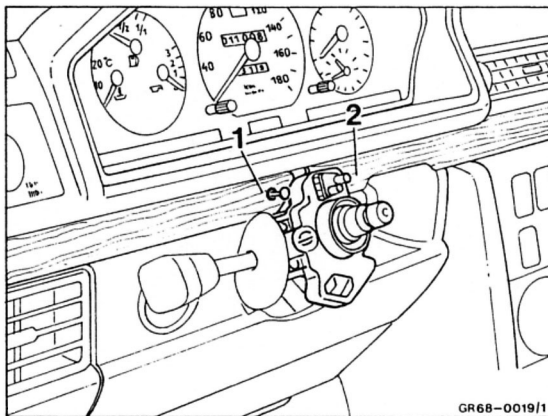


- 4 Remove blower switch (1) and release nut beneath it.
- 5 Remove radio and pull out oddments tray (2).
- 6 Release bolts and pull out pushbutton panel somewhat.

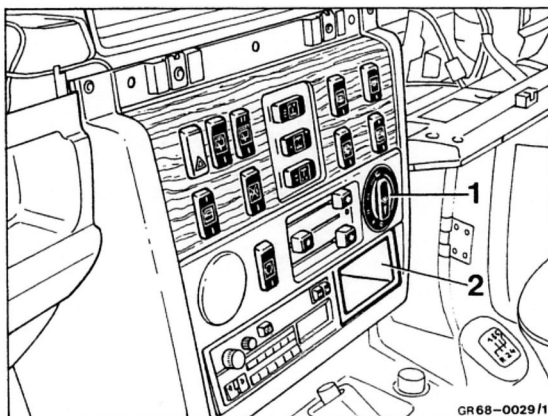


Note: Mark all connectors to the corresponding pushbuttons and detach.

- 7 Unclip Bowden cables (1) for air distribution behind the switch panel.
- 8 Remove pushbutton panel.
- 9 For removal and installation of side lining on center console refer to 3.2/1.

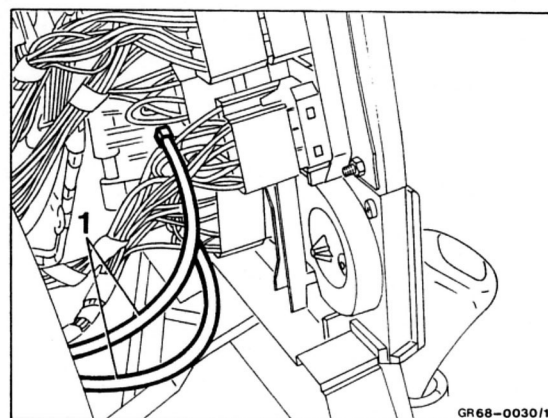

- 10 Release console and remove.
- 11 Install in reverse sequence.

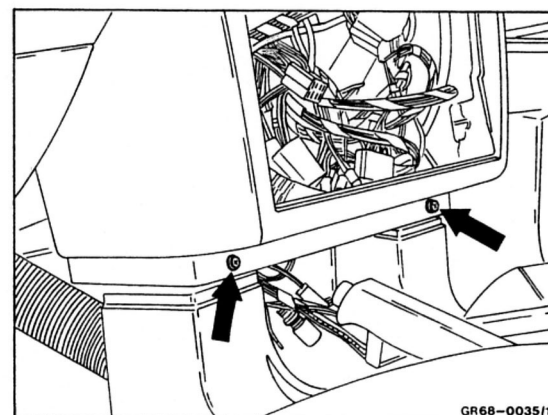


Removal and installation

- 1 Remove pedal covering.
- 2 Take out foot mat and remove accelerator pedal.
- 3 Remove side panelling


Note: For this purpose pull off carpeting a little and release screws beneath it (arrow).

- 4 Install in reverse sequence.

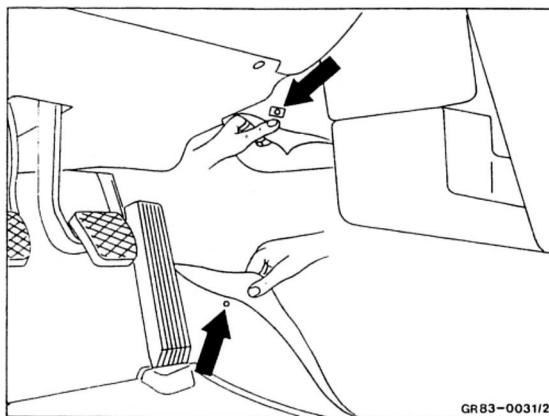


Removal

- 1 Remove cover on shift lever.

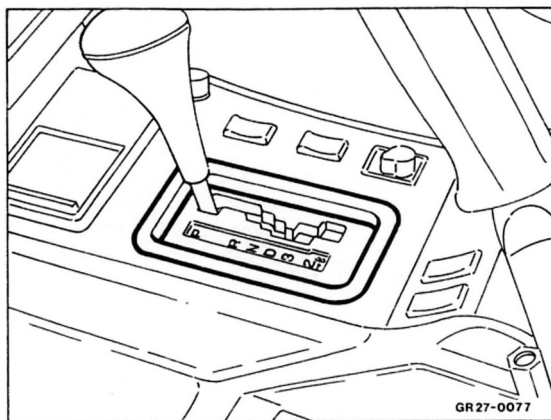


- 2 Release cover at the front.

Note: Remove ashtray.

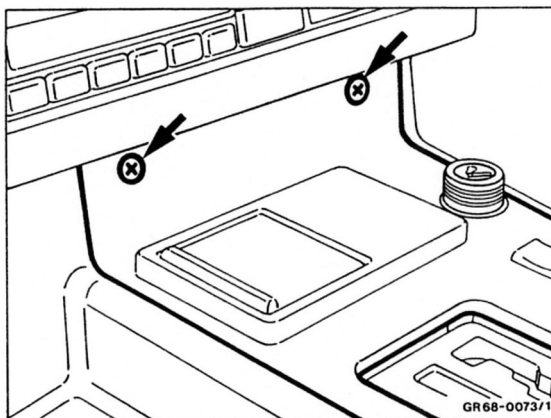

- 3 Release cover at the rear and remove.


Note: Mark all plugs to the corresponding switches and remove.

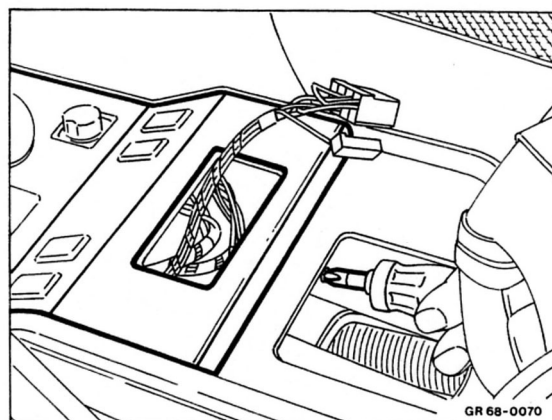

- 4 Remove cover from hand brake lever.

- 5 Unscrew 4 bolts on housing.


- 6 Remove ashtray and unscrew two bolts, then remove housing.

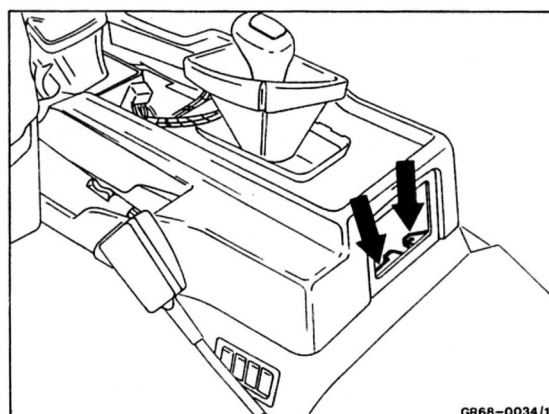


Removal and installation

1 For removal of driver's and front passenger seat, refer to 91.51 – 2.2/1.


2 Remove door seal of tailgate at the top (1) and at the side (2).

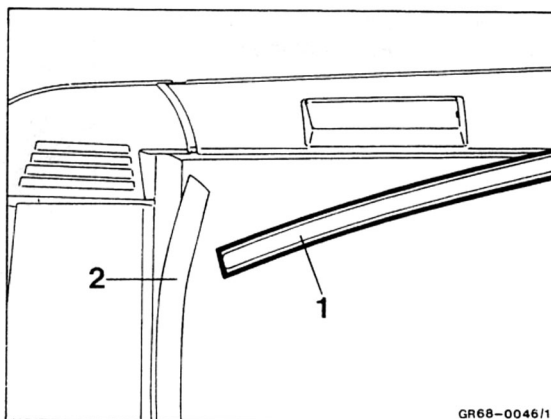


3 Remove lining of rear pillar on both sides.

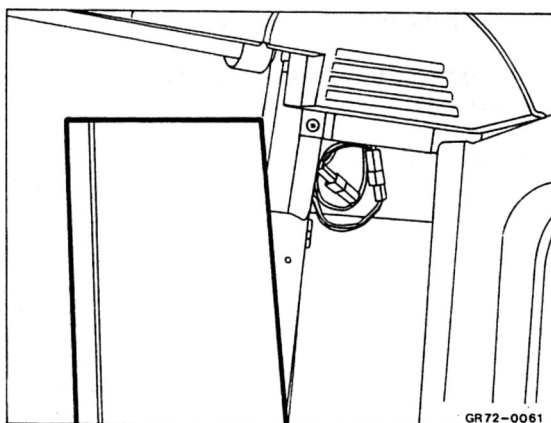


4 Remove roof lining over tailgate (3 screws).

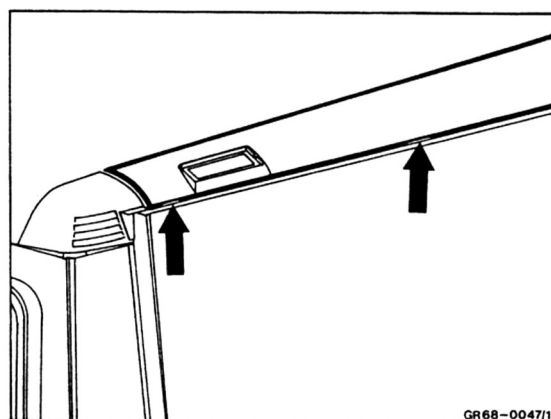


- 5 Detach connector of interior light.

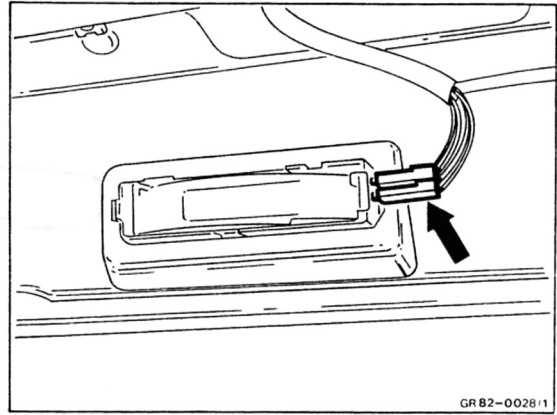


- 6 For removal of side windows and side wall lining, refer to 7.1/1.

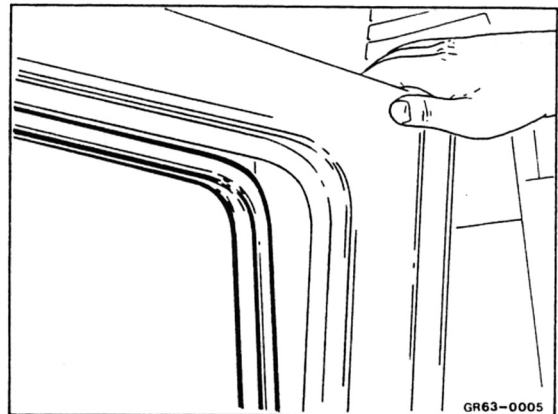


- 7 Remove ventilation cover.

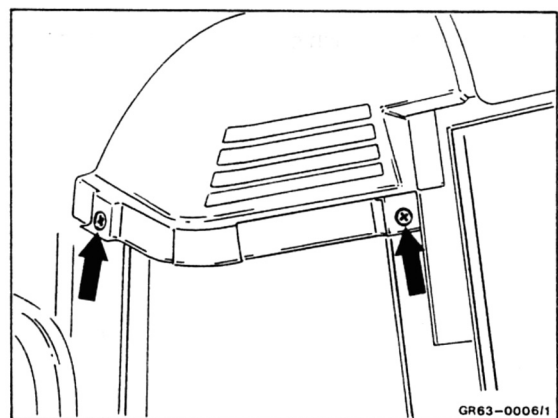


- 8 Unscrew headliner.
- 9 Detach lining on B pillar, refer to 6.1/1.

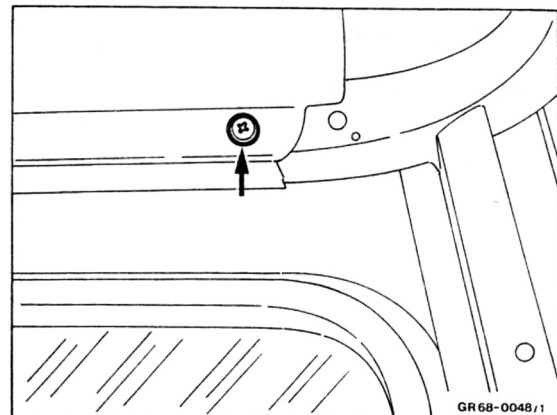


10 Pull back cover of handles.

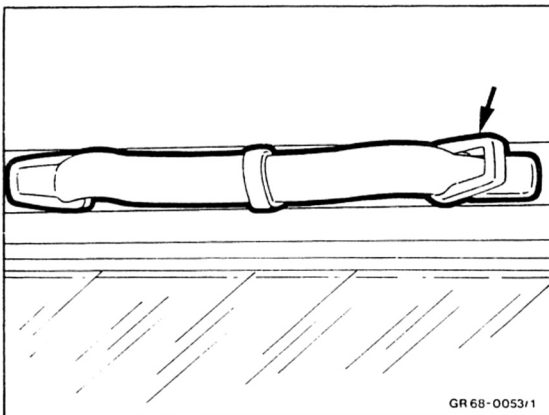

11 Unscrew handles.

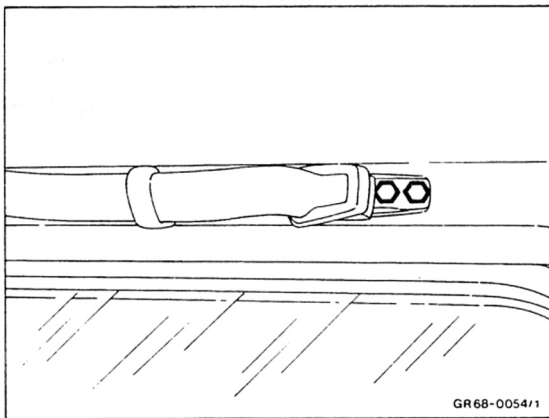


12 Detach lining on A pillar (windshield).

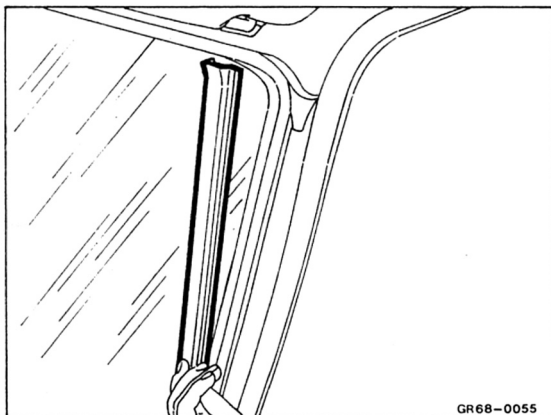

13 Remove sun visor on both sides.

14 Remove lining on sliding/tilting roof, refer to 77.51 – 2.1/1.


15 Remove draft deflector on sliding/tilting roof, refer to 77.51 – 11.1/1.

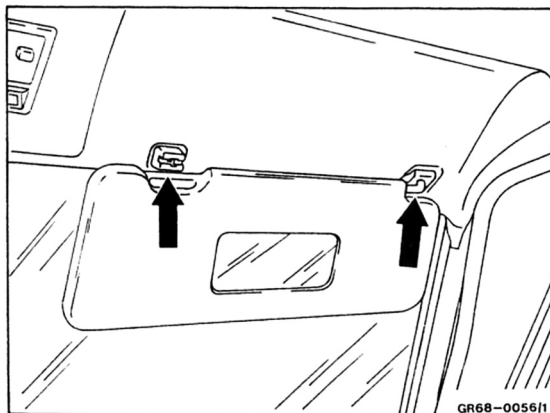

16 Remove interior rear-view mirror, refer to 68.50 – 8.1/1.


7 Remove interior lamp, refer to 82.51 – 3.1/1.

Note: Detect receiver unit in interior roof lining or on the interior rear-view mirror for the infrared remote control (RCL) connector.

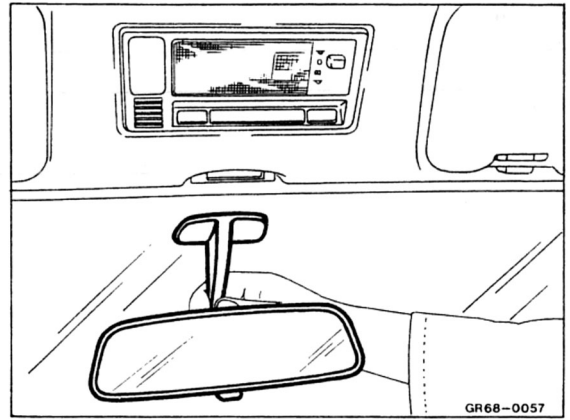

18 Remove all retaining clips from the roof lining.

Note: Knock out plugs. Remove dowels.

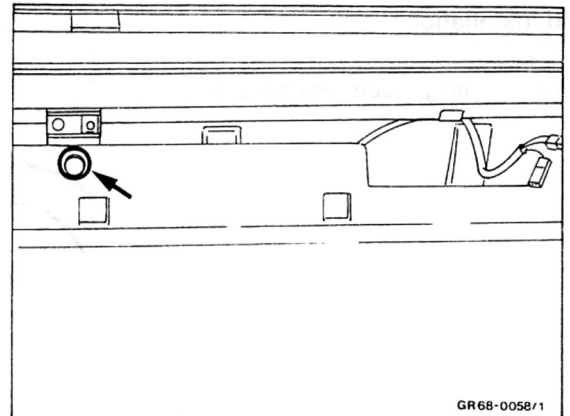

19 Remove roof lining to the rear.


20 Install in reverse sequence.

Installation note

– Seat belt fastening bolts are microencapsulated and are only to be used **once**.

Tightening torque:

35 ± 10 Nm

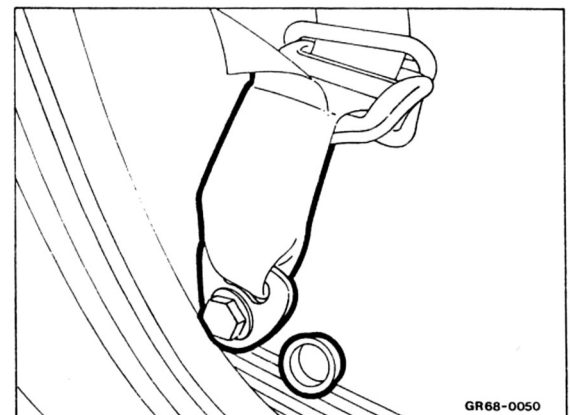


Tightening torques


Designation	Thread	Nm
Bolt for seat belt	7/16"	35 ± 10
	M 8 x 16	

Removal and installation


- 1 Remove door sealing rubber on door pillar.

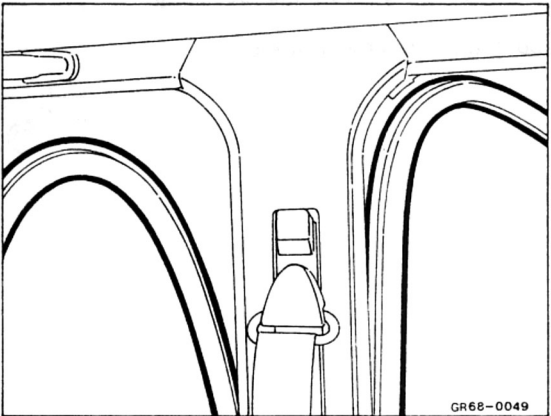


- 2 Press up and remove cover cap.

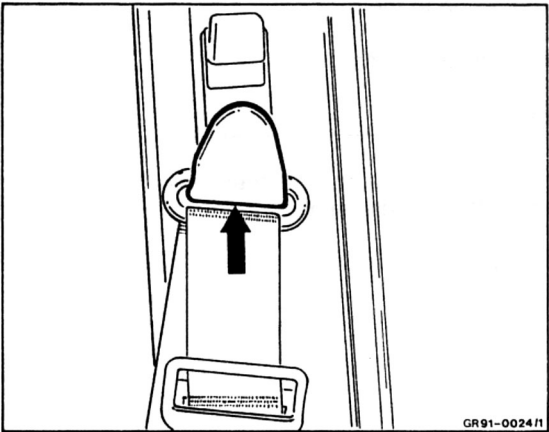


- 3 Unscrew seat belt.

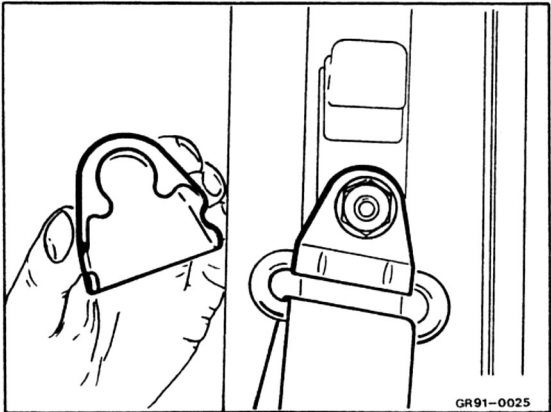


- 4 Unthread seat belt from lining (B-pillar).

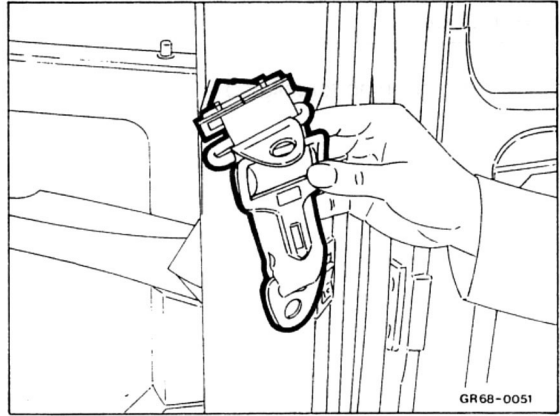

- 5 Remove connector (1) for switch of power window from lining (B pillar). (Special equipment)

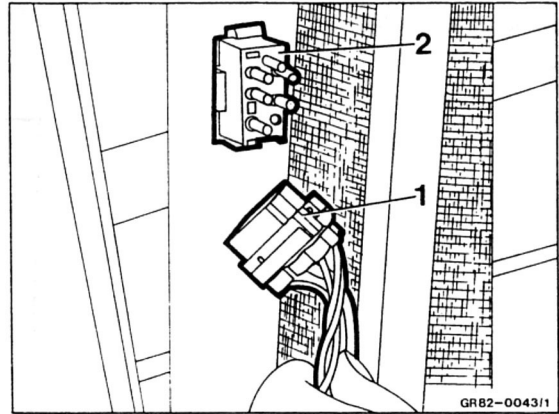

- 6 Detach lining (1) on B pillar.

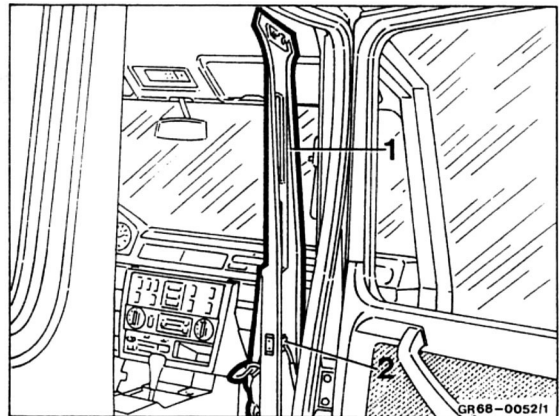


- 7 Install in reverse sequence.

Installation note

– Seat belt fastening bolts are microencapsulated and are only to be used **once**.


Tightening torque:

35 ±10 Nm

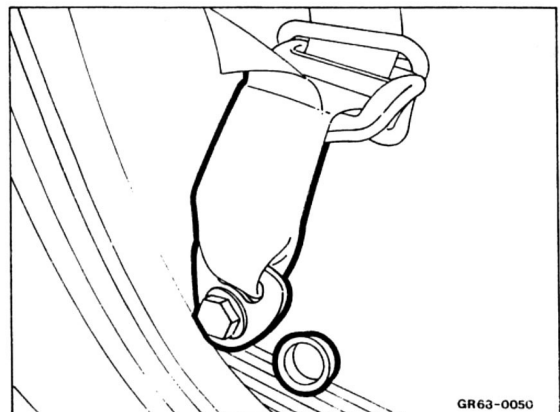


Removal and installation


- 1 Remove cover from opening for tailgate.

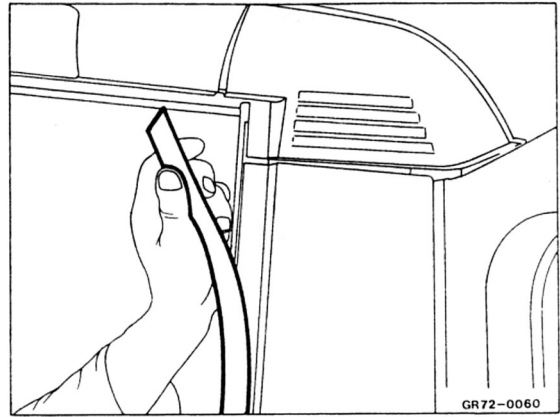


- 2 Remove lining of rear pillar.

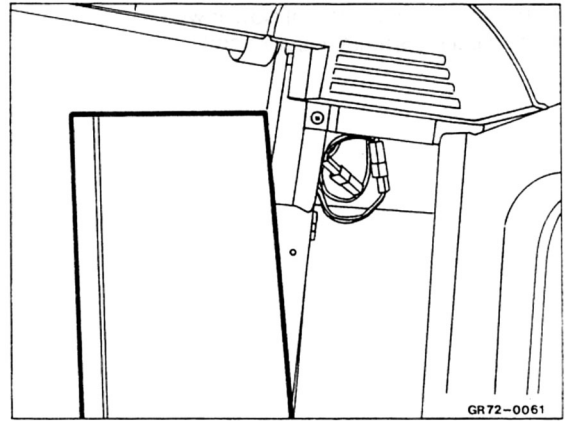


- 3 Release rubber seal from rear side door.

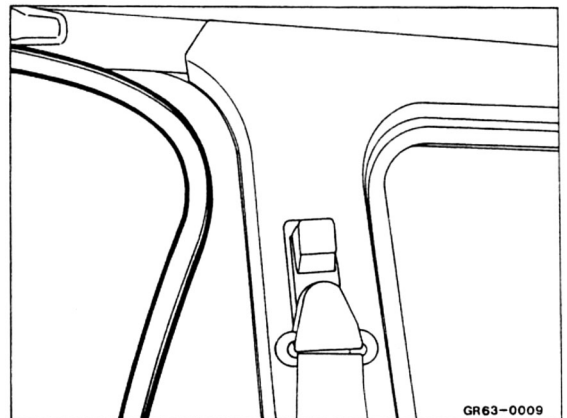


- 4 At lower seat belt retaining point remove cap and unscrew bolt.

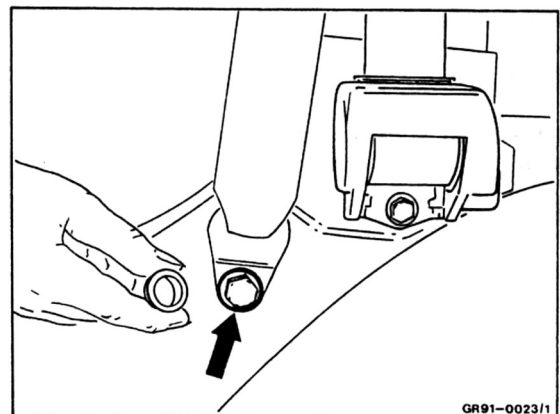


- 5 Press off seat belt cap in upward direction.

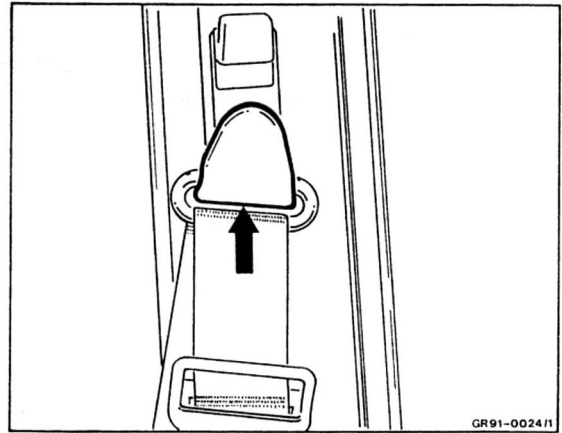

- 6 Unscrew seat belt.

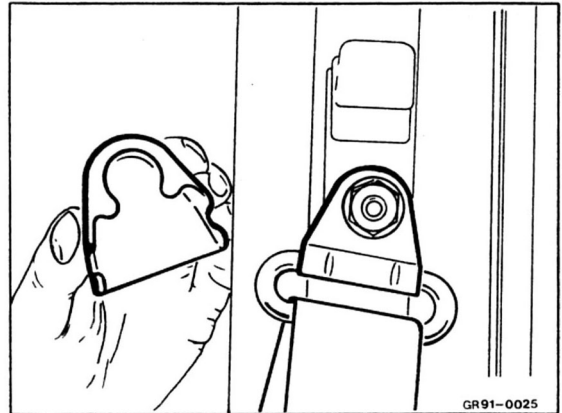

- 7 Remove side window and remove side wall lining from weatherstrip.

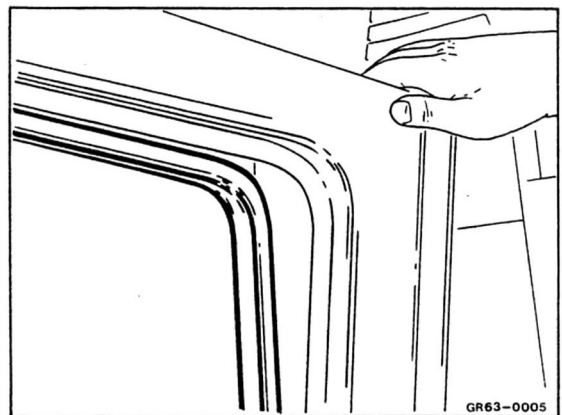

- 8 Remove side wall lining.


- 9 Install in reverse sequence.

Installation note

- Seat belt fastening bolts are microencapsulated and are only to be used **once**.

Tightening torque seat belt:


35 ± 10 Nm

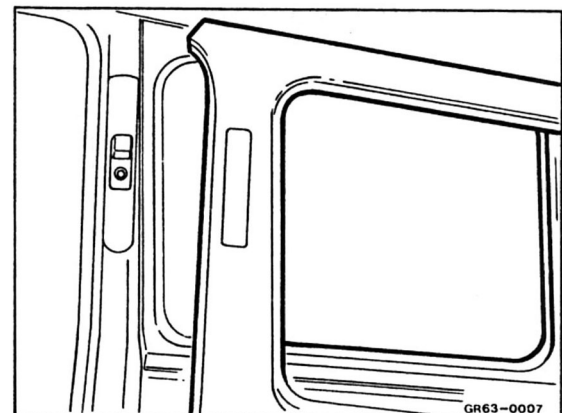


Wheelbase 2400 mm

Removal and installation


1 Unscrew seat belt at the front. Remove rubber door seal.

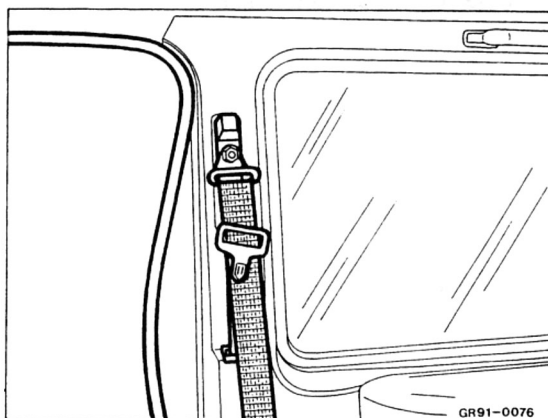


2 Unscrew seat belt at the rear.

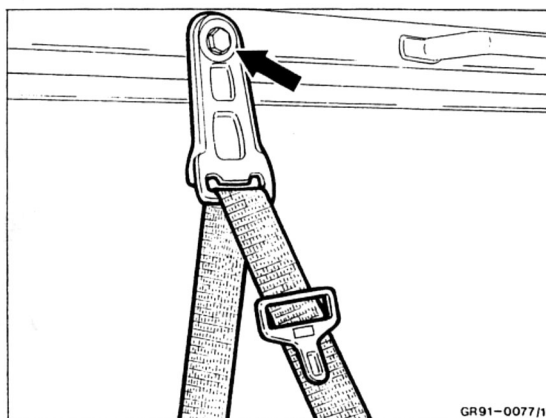

3 Unscrew handles.

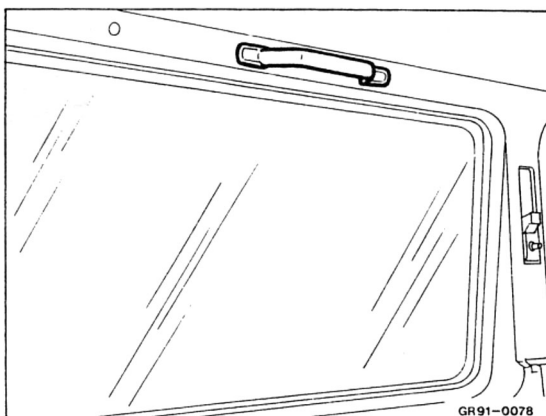


4 Remove side wall lining from weatherstrip.

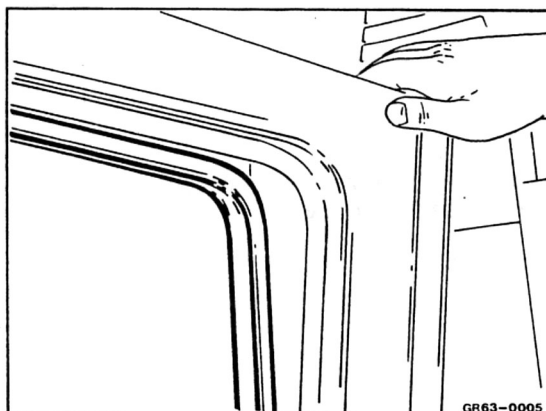


Wheelbase 2400 mm

- 5 Release clip attachment of lower lining to upper lining.

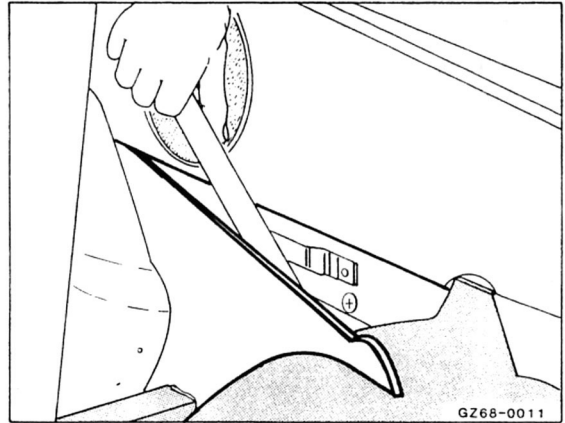


- 6 Remove ventilation lining in tailgate area.

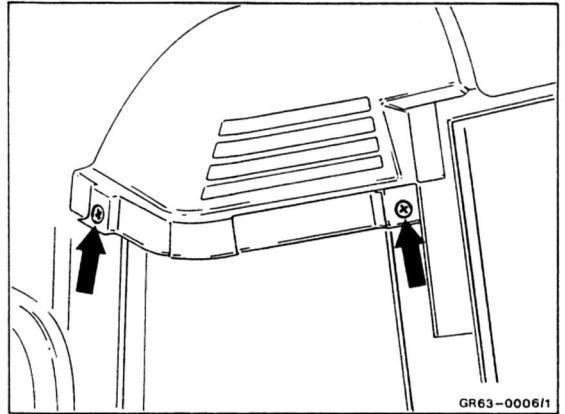


- 7 Release clip attachment of side lining and remove.

Note: Disconnect speaker connection, if provided.

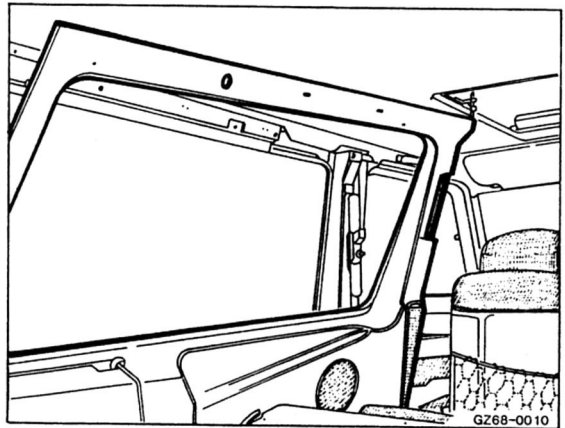


Removal and installation

- 1 Disconnect interior rear-view mirror from spring clip. (up to 3.95)

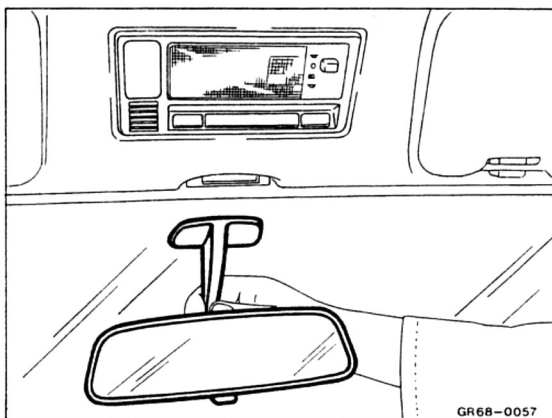


Disconnect interior rear-view mirror with infrared remote control (RCL) sensor and remove connector. (from 3.95)

Note: Detach cover of interior rear-view mirror in order to remove connector.

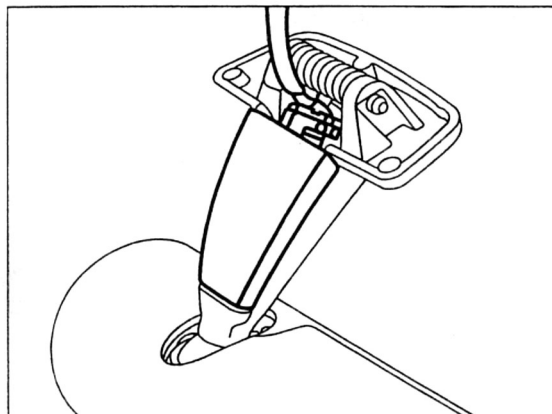

- 2 Unscrew plate with backing.

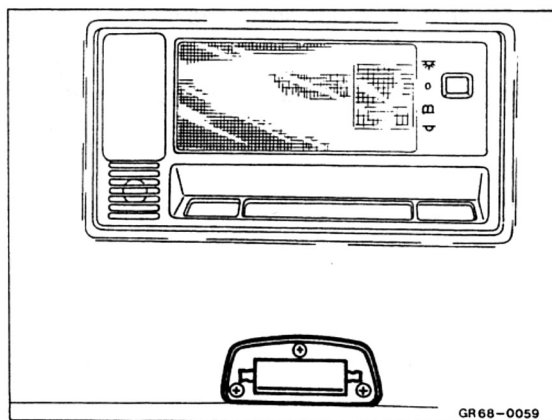


- 3 Install in reverse sequence.

Note: Press in mirror using a suitable object.

Removal and installation

- 1 Unscrew bolts for sun visor.

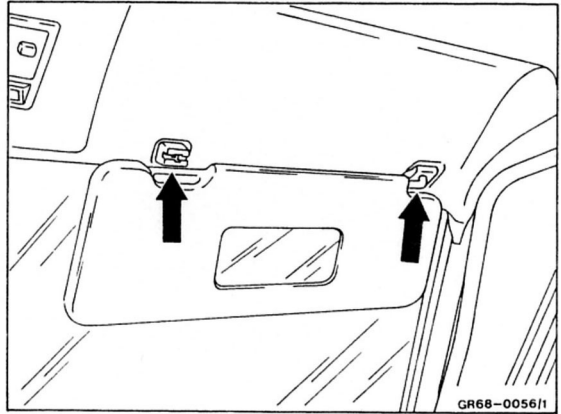

- 2 Remove sun visor.
- 3 Install in reverse sequence.